# KOG-206 Online Fluorescence Dissolved Oxygen Sensor User Manual



Shanghai GL Environmental Technology Co., Ltd Tel: 86-21-64897786 Fax: 86-21-51686350 E-mail: sales@glenvironment.com Website: www.glenvironment.com Add: #4, No.188 of Guanghua Road, Minhang District, Shanghai, China.

## **User Notes**

- Please read this manual in detail before using it and save it for reference.
- Please abide by the operating procedures and matters needing attention in this manual.
- When receiving the instrument, please carefully open the package and check whether the instrument and accessories are damaged by shipping. If any damage is found, please inform the manufacturer and distributor immediately and keep the package for return for processing.
- When the instrument fails, please do not repair it on your own, please contact the maintenance department of the manufacturer directly.

## Content

User Notes	2
I 、 Operational Principle	4
II 、 Technical performance and specifications	4
1. Technical parameter	4
2. Dimensional drawing	5
III、 Installation and electrical connection	5
1. Install	5
2. Electrical connection	6
IV, Maintenance	6
1. Maintenance schedule and methodology	6
2. Frequently questions	7
3. Calibration of sensors	8
4. Points for attention	8
V 、 Quality and service	8
1. Quality assurance	8
2. Spare parts and spare parts	9
3. After-sales service commitment	9
Appendix data communication	9

## $I \searrow \mbox{Operational Principle}$

RDO-206A integrated on-line fluorescence dissolved oxygen sensor is designed and fabricated based on the quenching principle of excited fluorescence by specific substances in physics. When the excitation light is shone on the fluorescent material on the surface of the fluorescent film head, the fluorescent material is excited and emits fluorescence. The quenching time of fluorescence is affected by the concentration of oxygen molecules on the surface of the fluorescent film head.By detecting the phase difference between fluorescence and excitation light and comparing with the internal calibration curve, the concentration of oxygen molecules can be calculated, and the final value can be output after temperature and salinity compensation.



- No electrolyte is required and will not be polarized.
- No oxygen consumption, not affected by flow rate.
- Built-in temperature sensor, automatic temperature compensation.
- Free from interference by chemicals such as sulfides
- Small drift, rapid reaction, more accurate measurement.
- Long service cycle, lower cost of use.
- Simple replacement of fluorescent cap.
- Rs-485 interface, Modbus/RTU protocol.
- Low power consumption, anti-interference.

### $II \smallsetminus \mbox{Technical performance and specifications}$

#### **1.** Technical parameter

Model KOG-206
---------------

Measuring principle	Fluorescence method	
Range ability	0~20mg/L (0 ≤ 200% saturation)	
<b>Resolution ratio</b>	0.01mg/L, 0.1℃	
Precision	±2%F.S., ±0.5℃	
Temperature compensation	Automatic temperature compensation (Pt1000)	
Output mode	RS-485 bus, Modbus-RTU protocol	
Working conditions	0∼45℃、<0.2MPa	
Storage temperature	-5∼65℃	
Installation mode	Immersion mounting	
Cable length	5 meters, other lengths customizable	
Power dissipation	<0.3W@12V	
Source	12~24VDC ±10%	
levels of protection	IP68	
Calibration	Two-point calibration	
Fluorescent cap life	Guaranteed use for one year (under normal use)	
Sensor shell material	POM and 316L stainless steel	

#### 2. Dimensional drawing



**Note:**The sensor connector is m16-5 core waterproof connector male.

## $III_{\smallsetminus}$ Installation and electrical connection

#### 1. Install

The sensor shall be installed fixedly below the liquid level. The installation and use shall

avoid collision or scraping against the surface of the fluorescent film head. The fluorescent film head part shall avoid being attached by the bottom sediment.Remove the rubber cover when use.

#### 2. Electrical connection

- Red wire-power cord  $(12 \sim 24V)$
- Black wire-ground wire (GND)
- Blue Line-485A
- White Line-485B

Check wiring sequence carefully before power on to avoid unnecessary losses caused by wiring errors.

Wiring instructions: Considering that the cables have been immersed in water (including seawater) or exposed to air for a long time, all wiring positions are required to be waterproof, and the cables should have certain corrosion resistance.

## $I\!V\,{\scriptstyle\diagdown}\,$ Maintenance

#### 1. Maintenance schedule and methodology

#### 1.1 Maintenance schedule

Different from the dissolved oxygen probe technology of electrochemical principle, the fluorescence dissolved oxygen probe does not consume oxygen and does not need to be cleaned frequently (except when it is used in viscous liquid).

Maintenance task	Recommended maintenance frequency
Cleaning sensor	Wash every 30 days
Check for damage to sensors and fluorescent caps	Check every 30 days
Replace the fluorescent cap	Replace it once a year
Calibrate sensors (if required by the competent authority) )	According to the maintenance schedule required by the competent department

Note: The maintenance frequency in the above table is only recommended, and the maintenance personnel shall clean the sensor according to the actual use of the sensor; however, the replacement frequency of the fluorescent cap is recommended once a year.

#### 1.2 Maintenance method

a) Sensor outer surface: clean the outer surface of the sensor with tap water, if there is still debris residue, wipe with wet soft cloth, for some stubborn dirt, you can add some household washing liquid to tap water to clean.

b) Surface of fluorescent film head: If there is dirt on the surface of fluorescent film head, please rinse with clean water or wipe gently with a soft cloth.Pay attention to the intensity of cleaning to avoid causing scratches in the measuring area and affecting the measurement accuracy.

c) Inside the fluorescent film head: it is generally unnecessary to clean. If water vapor or dust enters into the fluorescent film head, the cleaning steps are as follows:

- Screw down the fluorescent film head;
- Rinse the inner surface of the fluorescent film head and the optical window of the sensor.
- For oily dirt, you can use household cleaning solution;
- Gently dry the water with a clean flannelless cloth and let dry;
- Reinstall the fluorescent film head.

d) Check the cables of the sensor: there should be no damage to the skin and root of the cables; Terminals should not be submerged in water; When the sensor is normally installed, the cable should not be tensioned, otherwise the internal wire of the cable will easily break and the sensor cannot work normally.

e) Check whether the casing of the sensor is damaged by corrosion or other causes.

f) Daily storage of fluorescent film head: When not in use, a rubber protective cover with a wet sponge should be covered to keep the surface of the measuring area of fluorescent film head wet. If the surface of the measuring area of the sensor fluorescent film head is chronically dry, measurement error or data instability will occur, and it shall be soaked in water for 48 hours before use.

Wrong	Probable cause	Solution	
The operating interface	Error connecting controller to cable	Reconnect the controller and cable	
cannot connect or does not	Cable failure	Please contact us.	
display the measurement results	The fluorescent cap is not tightened or damaged	Refit and tighten the fluorescent cap or replace the fluorescent cap.	
The measured value is too high, too low, or the	The outer surface of the fluorescent cap is attached to the outer object	Clean the outer surface of the fluorescent film head and agitate the film head during measurement.	
numerical value remains unstable.	The fluorescent cap was damaged		
	The fluorescent cap has exceeded its service life	Replace the fluorescent cap	
Temperature measurements change slowly.	The temperature measuring area (stainless steel housing) is attached to the exterior	Gently brush the attachment with a soft brush	

#### 2. Frequently questions

#### 3. Calibration of sensors

#### a) Zero calibration

Weighing 5 g of sodium sulfite by a balance, adding 95mL of water into a 250-mL measuring cylinder, pouring the water into a beaker, adding the sodium sulfite which has been weighed, stirring with a glass rod, dissolving, and obtaining a solution of 5% sodium sulfite, putting the sensor in a solution, And the zero point calibration is carried out after the three-minute numerical stability is stable. Refer to the Appendix to the instructions

- b) Slope calibration
   The sensor probe is placed in air saturated water and the slope is calibrated after 3 minutes of numerical stability. The instructions refer to the appendix.
- c) Preparation of air saturated water: add 2% 3 volume fresh distilled water to the constant temperature water bath to float the porous plastic sheet on the water surface (see figure below). At the same time, the bubbler (air pump) is used to aerate the water continuously for more than 1 hour, stop aeration, and get air saturated water after 20 minutes or so. Put the sensor into the water and calibrate the slope after the numerical value is stable.



Note: as an option, slope calibration can also be performed in water-saturated air. Put the sensor in a calibration bottle with a small amount of water (the probe is higher than the water surface 2-3mm) to ensure that the sensor film cap remains wet but has no water droplets, and the calibration slope is calibrated after 3 minutes of numerical stability.

#### 4. Points for attention

- Avoid sun exposure to the inner surface of the fluorescent cap.
- Please don't touch the fluorescent film with your hands.
- Measuring and calibrating the surface of fluorescent film to avoid attaching bubbles.

• Avoid directly applying any mechanical stress (pressure, scratches, etc.) to the fluorescent film in use.

### $V \smallsetminus \ensuremath{\mathsf{Q}}$ Quality and service

#### 1. Quality assurance

• The quality inspection department has a standard inspection procedure, with advanced and complete detection equipment and means, and according to the procedure inspection, the product is subjected to 72-hour aging experiment and stability experiment, so that a

non-conforming product is not allowed to leave the factory.

• The consignee shall refund directly the product batches with a failure rate of 2%, and all expenses incurred shall be borne by the supplier. Consider the standard reference to the product description provided by the supplier.

• Ensure the quantity of goods and the speed of shipment.

#### 2. Spare parts and spare parts

This product includes:

- 1 sensor
- 1 copy of the manual
- 1 certificate

#### 3. After-sales service commitment

The company provides after-sales service for this machine within one year from the date of sale, but does not include the damage caused by improper use. If you need to repair or adjust, please send it back, but the freight must be borne by yourself, and it is necessary to make sure that the packing is good to avoid damage in transit. We will repair the damage of the instrument free of charge.

#### Appendix data communication

#### 1. Data format

The default data format for Modbus communication is: 9600, n, 8, 1 (baud rate 9600bps, 1 start bit, 8 data bits, no check, 1 stop bit).

#### 2. Information frame format (xx stands for one byte)

a)	Read dat	a instru	ction frai	me				
	06	03	>	x xx		хх	XX	XX XX
Ad	dress	FC	Registe	r start ac	ldress	Number	of registers	CRC check code (low bytes in front)
b)	Read dat	a respo	nse fram	e				
	06	03	хх			xxxx		XX XX
Ad	dress	FC	Number	of bytes	Respo	nse data	CRC chec	k code (low bytes in front)
c)	Write da	ta instru	uction fra	me				
	06	06	хх	хх	хх	хх	xx xx	
Ad	dress	FC	Register	address	Read-	in data	CRC check	code (low bytes in front)
d)	Data resp	oonse fi	rame					
	06	06	хх	хх	хх	XX	xx xx	
Ad	dress	FC	Register	address	Read	-in data	CRC checl	k code (low bytes before)

## 3. Register address

Register address	Name	Instruction	Number of registers	Access method
44353 (0x1100)	Switch machine	Boot write data 1, shut down write data 0. The power on defaults to the boot state.	1 (2 bytes)	write
40001 (0x0000)	Measured value+temper ature	Four double-byte integers, measured, measured decimal, temperature decimal places, respectively, measured, decimal places.	4 (8 bytes)	read
40005 (0x0004)	Dissolved oxygen saturation (0- 200%)	Two double-byte integers, saturation values and decimal places, respectively.	2(4 bytes)	read
44097 (0x1000)	Zero calibration	Calibrated in anoxic water, writing data 0; readout data zero offset.	1 (2 bytes)	Write / read
44101 Slope (0x1004) calibration		Calibrate in air-saturated water, write data to 0, read data to slope value × 1000.	1 (2 bytes)	Write / read
44113 (0x1010)	temperature correction	In the solution, the written data is the actual temperature value × 10, and the readout data is the temperature calibration offset × 10.	1(2 bytes))	Write / read
44129 Salinity (0x1020) compensation		The read / write data is salt value (PSU) × 10, which is used for salinity compensation, and the factory default is 0, no salinity compensation.。	1 (2 bytes)	Write / read

48195 (0x2002)	Sensor address	The default is 6, and the data range is 1-127.	1 (2 bytes)	Write / read
48225 (0x2020)	Reset sensor	The calibration value restores the default value, and the write data is 0. Note that the sensor needs to be calibrated again after resetting.	1 (2 bytes)	write

#### 4. Command example

a) Boot instruction:

Function: let the probe emit light continuously and begin the measurement of dissolved oxygen value.

Request frame: 06 06 11 00 00 01 4C 81

acknowledgement frame : 06 06 11 00 00 01 4C 81

b) Start measurement instruction:

Function: obtain the temperature and dissolved oxygen value of the measuring probe; the unit of temperature is degrees Celsius, and the unit of dissolved oxygen value is mg/L.

Request frame: 06 03 00 00 00 04 45 BE

acknowledgement frame : 06 03 08 01 02 00 02 00 B0 00 01 D4 48 Reading example:

Dissolved oxygen value	temperature scale	
01 02 00 02	00 B0 00 01	

For example, the dissolved oxygen value 01 02 indicates the hexadecimal reading dissolved oxygen value, and 0002 indicates the dissolved oxygen value with 2 decimal points, which is converted to a decimal value of 2.58.

The temperature value 00B0 represents the hexadecimal reading temperature value, 0001 indicates the temperature value with 1 decimal point, converted to a decimal value of 17.6.

- c) Calibration instruction:
  - Zero calibration

Function: set the calibration value of dissolved oxygen zero point of sensor;

Request frame: 06 06 10 00 00 00 8C BD

acknowledgement frame : 06 06 10 00 00 00 8C BD

Slope calibration

Function: set the slope calibration value of dissolved oxygen for the sensor; here the slope value is calibrated in air saturated water  $_{\circ}$ 

Request frame: 06 06 10 04 00 00 CD 7C

acknowledgement frame : 06 06 10 04 00 00 CD 7C

d) Set the device ID address:

Function: set the MODBUS device address of the sensor;

Change the device address 06 to 01, with the following example

Request frame: 06 06 20 02 00 01 E3 BD acknowledgement frame : 06 06 20 02 00 01 E3 BD
e) Salinity compensation instruction: Role: Set the sensor salinity compensation; The water with a salinity of 35.0 PSU is measured and salinity compensation is added. Examples are as follows: Request frame: 06 06 10 20 01 5E 0D 1F Reply Frame: 06 06 10 20 01 5E 0D 1F

#### 5. Error response

If the sensor does not execute the upper computer command correctly, the following format information is returned:

Definition	Address	Function code	Code	CRC check
Data	ADDR	COM+80H	хх	CRC 16
Number of bytes	1	1	1	2

a) CODE: 01 – Functional code error

03 – Data error

b) COM: Received function code